

## C. &amp; L. FIRE POTS AND TORCHES

## FOR GASOLINE

No. 71

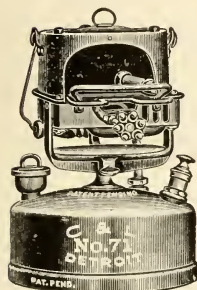 


Plate E12731

No. 21

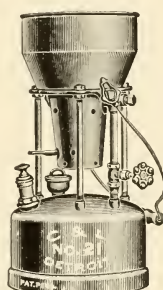 


Plate E12732

No. 11

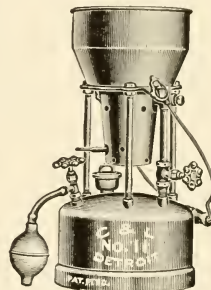 


Plate E12733

No. 71. Noiseless, smokeless and odorless. Has sub-flame for generator. Burner has double heating surfaces. The gas is superheated and produces a very hot flame.

No. 21 Steel Fire Pot is extra strong and durable. Tank is heavy gauge with bottom and fittings welded in (not soldered). Extra heavy uprights and top plate and large filler. Fitted with automatic brass pump.

No. 11 is the same as No. 21, but has rubber bulb to produce pressure.

Number.....	71	21	11
Capacity.....pints	7	8	8
Price.....each	13.60	9.60	8.80

No. 32

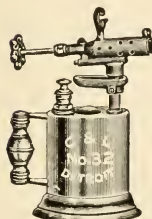 


Plate E12734

No. 31

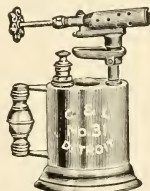 


Plate E12735

No. 18



Plate E12736

No. 19

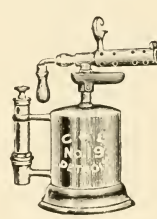 


Plate E12737

No. 32 Torch is unsurpassed where intense heat is desired. Produces a perfect blue flame indoors or out, in hard wind or extreme cold. Bronze metal burner has generating chamber, superheating the gas and producing a hot blue flame. Burner has attachment for holding soldering coppers.

No. 31 is the same as No. 32, but without hook and support for holding soldering coppers.


No. 18 Torch is snugly built, rendering it light, yet strong and easily handled in close work. The bottom handle casting is made with a recess in which the check valve works automatically.

No. 19 is the same as No. 18, with the addition of the attachment on the burner for holding soldering coppers.

Number.....	32	31	18	19
Capacity.....pints	2	2	1	1
Price.....each	8.00	7.60	6.00	6.40


## C & L FIRE POT AND PUMP REPAIRS
 
### COIL FIRE POT REPAIRS

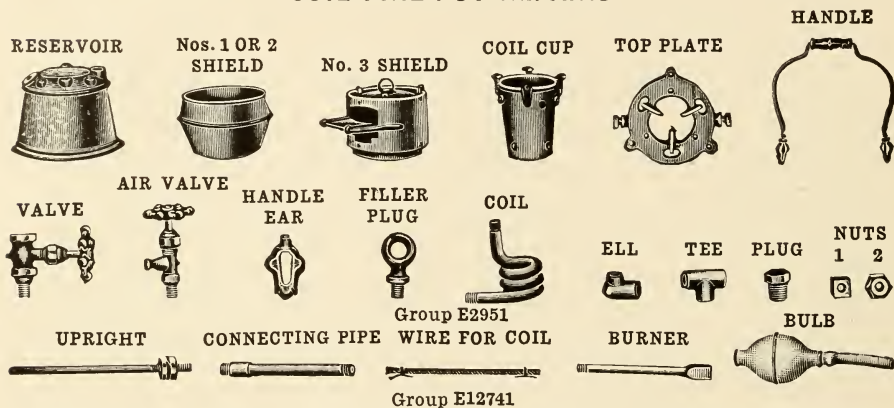

Description	Each	Description	Each	Description	Each
Reservoir .....	2.40	Handle Ear.....	.12	Nuts, Nos. 1 or 2	.04
Nos. 1 or 2 Shield ..	.70	Filler Plug.....	.40	Upright .....	.12
No. 3 Shield .....	1.60	Coil .....	.60	Connecting Pipe..	.12
Coil Cup .....	.40	Ell or Tee, Mall.	.10	Wire for Coil....	.08
Top Plate.....	.30	Ell, Brass .....	.14	Burner.....	.14
Handle.....	.40	Tee, " .....	.20	Bulb.....	.48
Valve.....	.60	Plug.....	.08	Brass Pump for No. 20..	1.28
Air Valve.....	.40	.....	...	.....	...

### FIRE POT REPAIRS

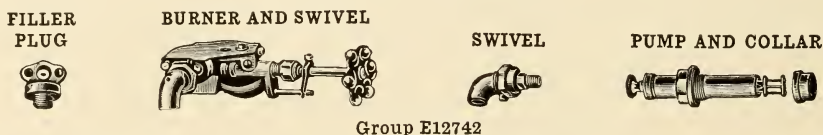 

Description	Each	Description	Each	Description	Each
Filler Plug.....	.40	Burner and Swivel....	4.00	Pump for Fire Pot	1.28
Filler " Collar.	.15	Swivel.....	1.00	" Collar.....	.15

### PUMP REPAIRS



Description	Each	Description	Each	Description	Each
Cup Leathers....	.08	Cork Seat.....	.02	Plunger Rod.....	.20
Hexagon Nuts....	.02	Springs .....	.03	Plunger Complete .....	.50
Pump Caps.....	.10	Cork Holder.....	.10	Pump Complete.	1.28
Plunger Knobs...	.10	End Plates .....	.08	" Collar.....	.15